

# TT-DEC and TT-DEC-R: programming- and control table

turntable function (command) operation mode    programming mode		area: 14 address	area: 15 address	turnout command	key			symbol					TC
					IB	LH100	multiMAUS	CS 3	CS 2	CS 1 ECoS	Win- Digipet		
-	> Ende <	209	225	round	red	-							-
-	> Input <	209	225	straight	green	+							-
-	> Clear <	210	226	round	red	-							
> Turn <	> Turn <	210	226	straight	green	+							-
clock wise > Step <	clock wise > Step <	211	227	round	red	-							
anti clock wise	anti clock wise	211	227	straight	green	+							
clock wise > Drehrichtung <	clock wise > Drehrichtung <	212	228	round	red	-							
anti clock wise	anti clock wise	212	228	straight	green	+							
track connection 1	-	213	229	round	red	-							
track connection 2	-	213	229	straight	green	+							
track connection 3	-	214	230	round	red	-							
track connection 4	-	214	230	straight	green	+							
...	...	...	...	...	...	...	...			...	...	...	...
...	...	...	...	...	...	...	...			...	...	...	...
track connection 23	-	224	240	round	red	-							
track connection 24	-	224	240	straight	green	+							

Abbreviations: IB = Intellibox; LH100 = manual control Lenz Digital plus; CS 1 / CS 2 / CS 3 = Central Station 1 / 2 / 3; TC = TrainController